


In order to update the firmware of the SmartCameras, please follow the instructions:

- You need the firmware called "3rdparty.img"
- Put the file 3rdparty.img on the root of a USB key
- Power OFF the camera
- Open the housing
- Set the top jumper on the right as follow in order to put the camera in FME mode:



Switch in normal mode (both switch on left position):

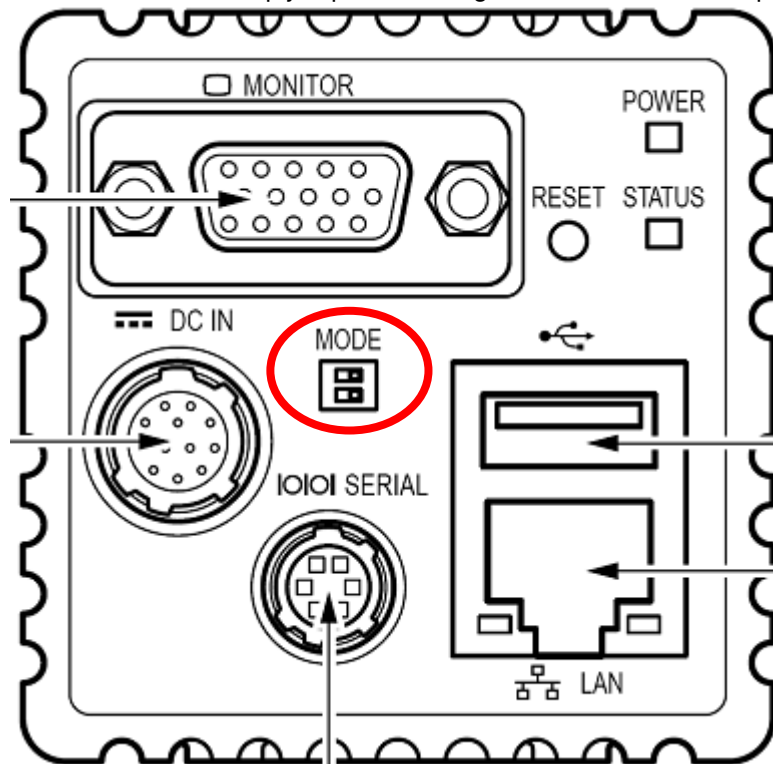

Switch in FME (Firmware Maintenance Environment) mode (top switch on right position):



- Once the camera is in FME mode, plug the USB key on the USB plug
- Power ON the camera
- Wait approximately 30-45 second or wait for the red LED to switch OFF (the LED will switch ON then Switch OFF after approximately 30 seconds). You should observe that your USB key is blinking (depending on your USB key). When your USB key stops blinking this mean that the update is over.
- Power OFF the camera
- Unplug the USB key
- Put the top switch on the left position, in order to put the camera in normal mode
- Power the camera ON